

The following input commands will be provided for the LMO operators. All inputs are momentary contact, normally open:

Open	Terminal # 14
Close	Terminal #12
“Last Man Out” *	Terminal #19
BEA Superscan installed on closing side	Terminal #11(opens the door)
BEA Superscan installed on opening side	Terminal #20(closes the door)

*PLC modified to start an internal timer once LMO command is activated. The timer, which is adjustable from 1-60 seconds via the Hold Open Delay timer 'i' located on the second page of the operator Presets page on the programming HMI, allows the CLOSE command to be activated within the preset time. If the CLOSE command is activated after the preset timer has expired, the door will not close and the “Last Man Out” input will need to be reactivated.