



WARNING!

IMPORTANT INSTALLATION INSTRUCTIONS

THE (ETH) HINGE IS NOT A LOAD BEARING HINGE AND MUST BE INSTALLED AS THE CENTER HINGE IN A (3) HINGE SYSTEM. THE (2) OUTER HINGES MUST BE 18508 OR 18515 LOAD BEARING HINGES. ASSURE THE DOOR IS FULLY SUPPORTED WITH (2) LOAD BEARING HINGES FIRST. INSTALL THE (ETH) HINGE LAST.

Rev.	Revision note	Date	Drawn	Check
1	ADD NOTES	2-25-14		

ELECTRIC TRANSFER HINGE(ETH)

Material: 1018 3045ST Date: 2/10/10 Scale: 1:1

18508-ETH HINGE IS NON-LOAD BEARING

brookfield industries inc.
99 West Hillside Ave.: Thomaston, CT
P: (860) 285-6211 F: (860) 283-6123
info@brookfieldindustries.com

www.brookfieldindustries.com
Drawing No: ETH-1
18508-ETH-1

Drawn by: XXX
Checked by: XXX